


SISTEMI DI APERTURE
OPENING SYSTEMS
ÖFFNUNGSSYSTEME
SYSTEMES D'OUVERTURE
SISTEMAS DE APERTURA

Lift Advanced HL
Lift Advanced HS

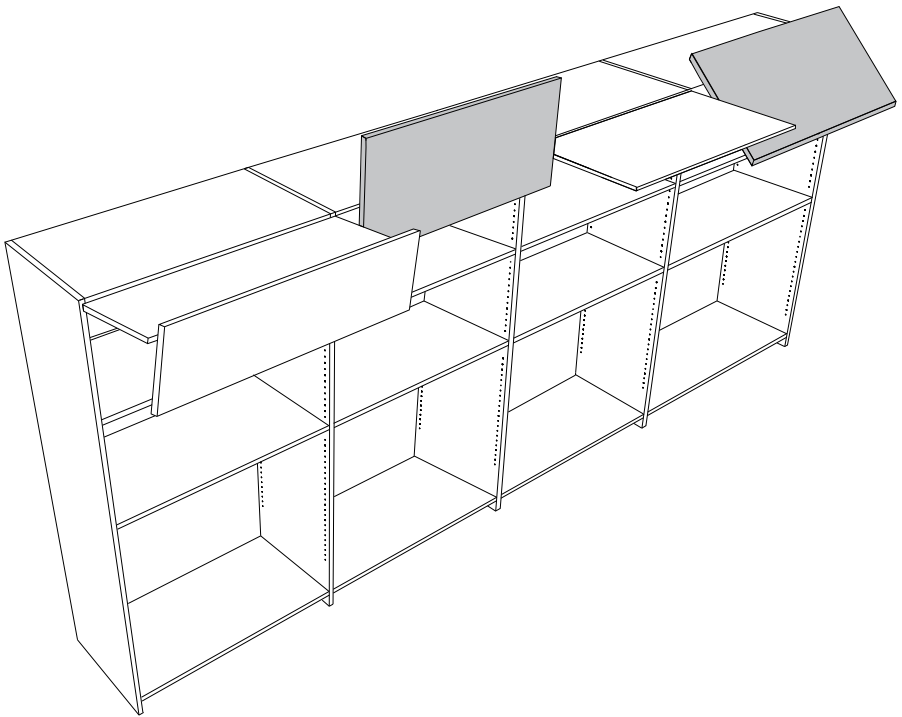

Istruzioni di montaggio e
caratteristiche tecniche
Mounting instructions and
technical data
Montageanleitung und
technische Daten
Instructions de montage
et caractéristiques
techniques
Instrucciones de montaje
y características técnicas

Technik für Möbel

**Hettich**

INDICE

INDEX

Pag. 5

MISURE TECNICHE LIFT ADVANCED HS
TECHNICAL MEASURES LIFT ADVANCED HS
TECHNISCHE ABMESSUNGEN LIFT ADVANCED HS
MESURES TECHNIQUES LIFT ADVANCED HS
MEDIDAS TECNICA LIFT ADVANCED HS

Pag. 9

MISURE TECNICHE LIFT ADVANCED HL
TECHNICAL MEASURES LIFT ADVANCED HL
TECHNISCHE ABMESSUNGEN LIFT ADVANCED HL
MESURES TECHNIQUES LIFT ADVANCED HL
MEDIDAS TECNICA LIFT ADVANCED HL

Pag. 13

FISSAGGIO MECCANISMO
MECHANISM INSTALLATION
MONTAGE DES BESCHLAGS
FIXATION DU MECANISME
FIJACION DEL MECANISMO

Pag. 19

REGOLAZIONI ANTA
DOOR ADJUSTMENTS
EINSTELLUNG DER KlapPE
REGLAGES DE LA PORTE
AJUSTES DE LA PUERTA

INDICE

INDEX

Pag. 23

REGOLAZIONE MECCANISMO
MECHANISM ADJUSTMENT
EINSTELLUNG DES BESCHLAGS
RÉGLAGE DU MECANISME
ADJUSTE DEL MECANISMO

Pag. 29



TABELLE FORZE MOLLE LIFT ADVANCED HS
PISTON STRENGTH CHART LIFT ADVANCED HS
GEWICHTSTABELLEN LIFT ADVANCED HS
BAREME FORCE LIFT ADVANCED HS
TABLA FUERZA LIFT ADVANCED HS

Pag. 33


TABELLE FORZE MOLLE LIFT ADVANCED HL
PISTON STRENGTH CHART LIFT ADVANCED HL
GEWICHTSTABELLEN LIFT ADVANCED HL
BAREME FORCE LIFT ADVANCED HL
TABLA FUERZA LIFT ADVANCED HL

Lift Advanced


Unica foratura del mobile
One drilling of cabinet
Bohrbild im Korpus
Perçage unique du meuble
Una unica mecanizacion

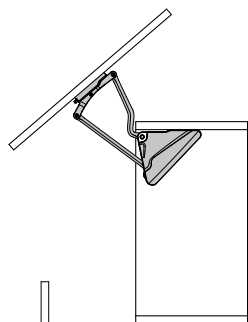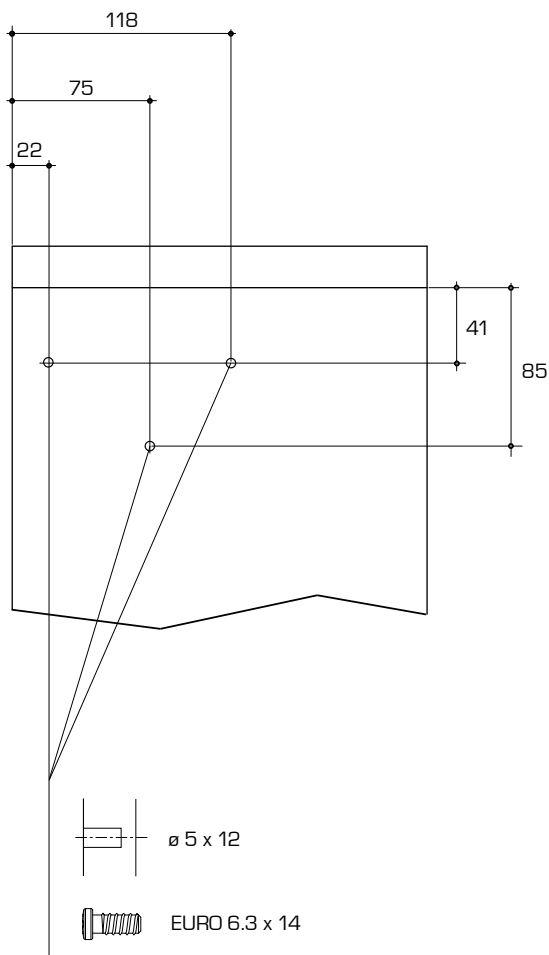


Lift Advanced HS

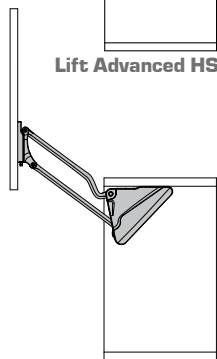

Lift Advanced HL

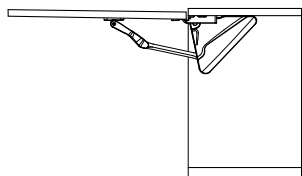


Lift Advanced HK




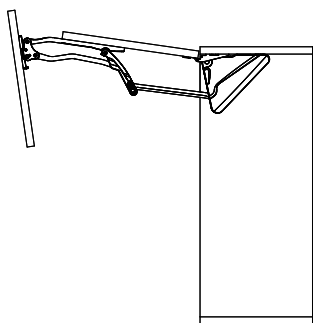





Lift Advanced HF

MISURE TECNICHE LIFT ADVANCED HS
TECNICAL MEASURES LIFT ADVANCED HS
TECHNISCHE ABMESSUNGEN LIFT ADVANCED HS
MESURES TECHNIQUES LIFT ADVANCED HS
MEDIDAS TECNICA LIFT ADVANCED HS

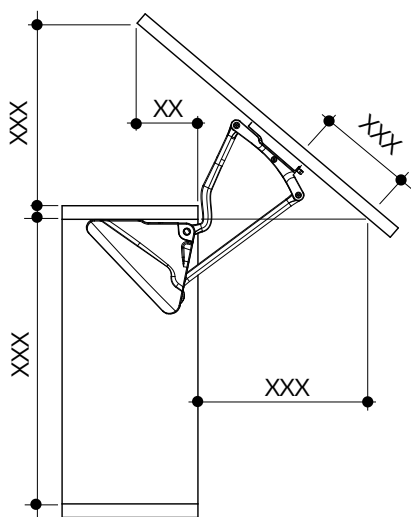


Lift Advanced HS #9079617

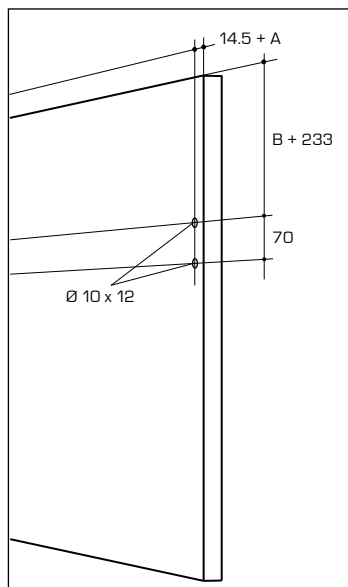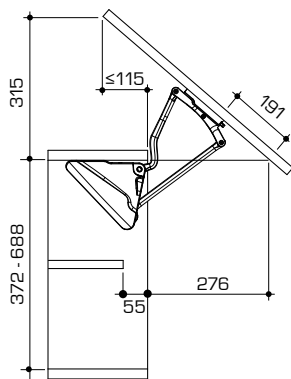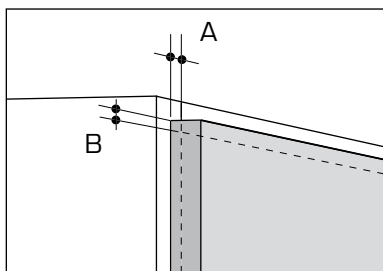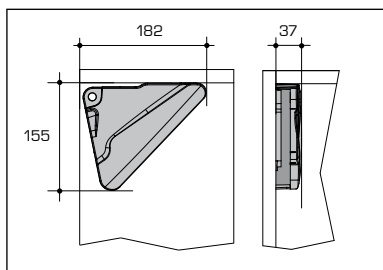

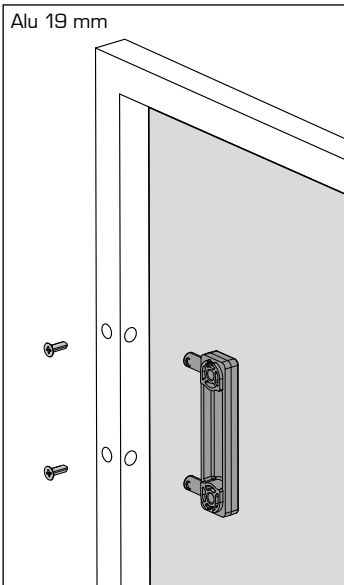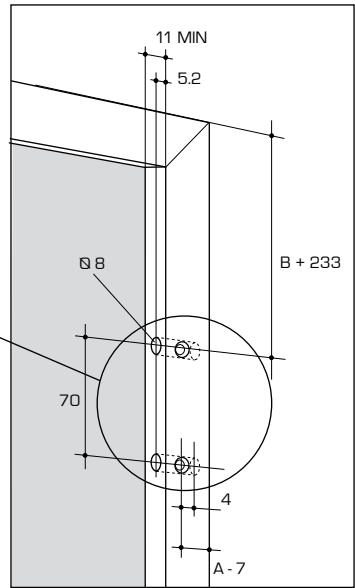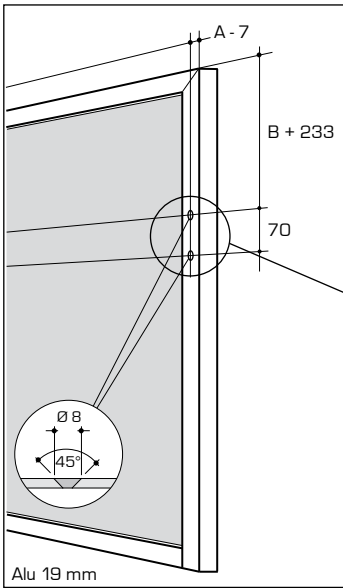


SET PER ALU 19 MM
 SET FOR ALU 19 MM
 SET 19 MM ALU
 SET POUR ALU 19 MM
 JUEGO PARA ALU 19 MM




9079601 : 1 set

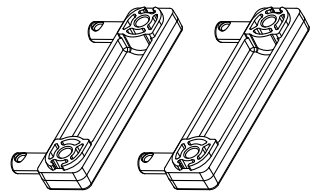


MISURE TECNICHE LIFT ADVANCED HL
TECHNICAL MEASURES LIFT ADVANCED HL
TECHNISCHE ABMESSUNGEN LIFT ADVANCED HL
MESURES TECHNIQUES LIFT ADVANCED HL
MEDIDAS TECNICA LIFT ADVANCED HL

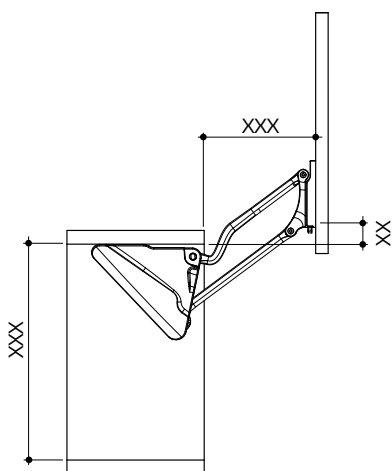


Lift Advanced HL #9079595

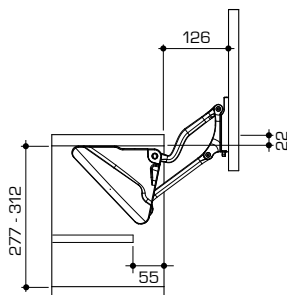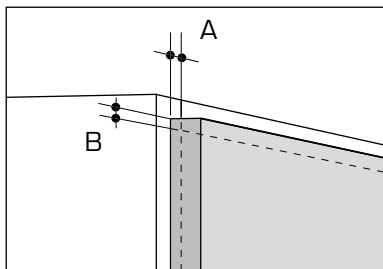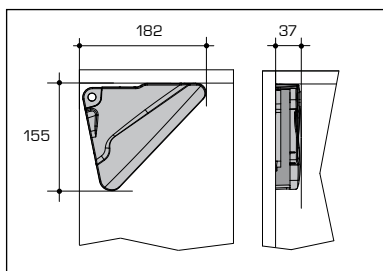

T = 160

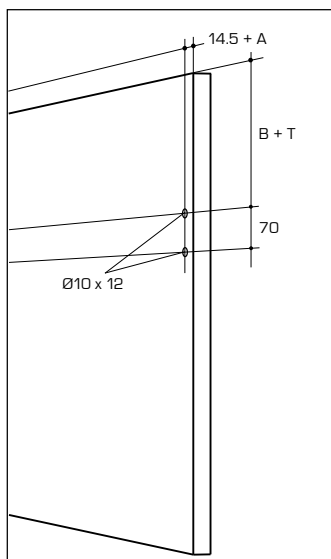


Lift Advanced HL
#9079597


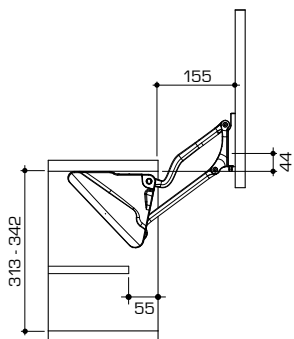


T = 195


Lift Advanced HL
#9079598

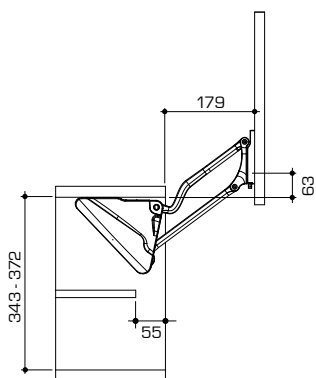

T = 225

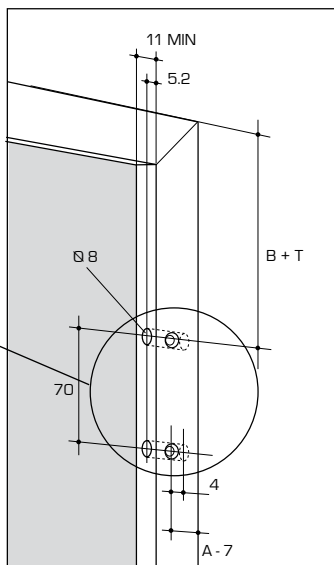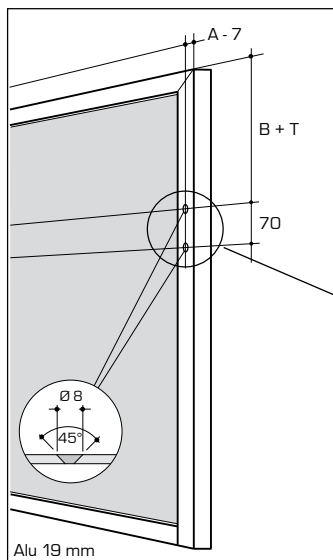


Lift Advanced HL
#9079599

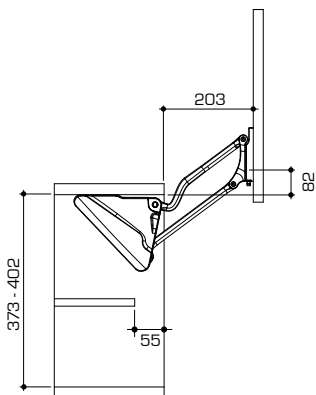


T = 255

Lift Advanced HL
#9079600

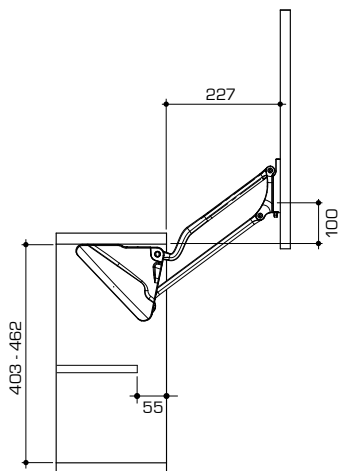


T = 285

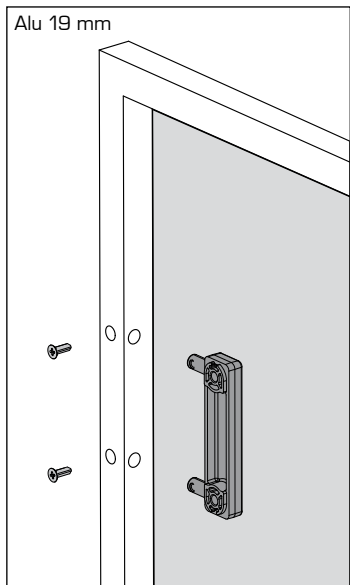

SET PER ALU 19 MM
SET FOR ALU 19 MM
SET 19 MM ALU
SET POUR ALU 19 MM
JUEGO PARA ALU 19 MM

9079601 : 1 set

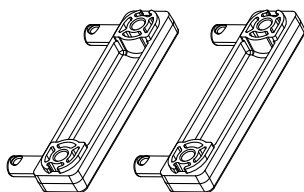

M4 x 10


FISSAGGIO MECCANISMO

MECHANISM INSTALLATION




MONTAGE DES BESCHLAGS

FIXATION DU MECANISME

FIJACION DEL MECANISMO

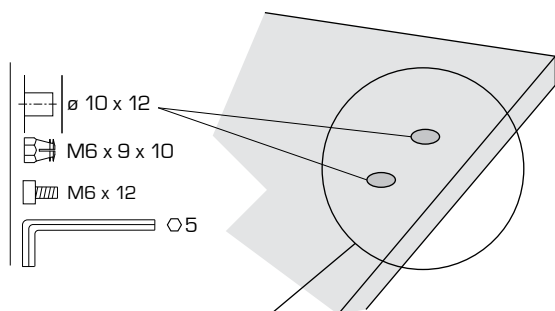


Preparazione delle ante
Preparation of flaps
Vorbereitung der Klappen
Préparation des abattants
Preparación del herraje elevable

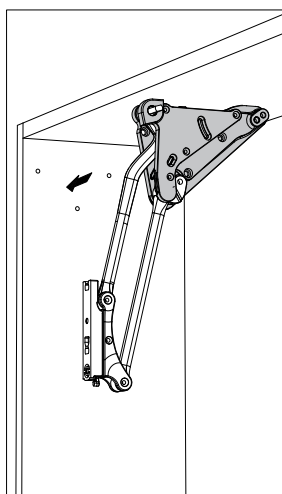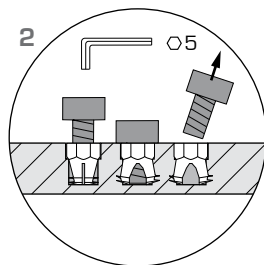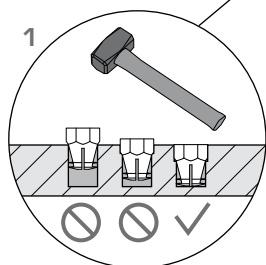


Fissare il meccanismo
Fix mechanism
Beschlag anschrauben
Fixer le mécanisme
Fijar el mecanismo

 EURO 6.3 x 14


Inserire la molla a gas - Insert gas spring - Gasfeder einsetzen
Installer le piston à gaz - Colocar el piston de gas

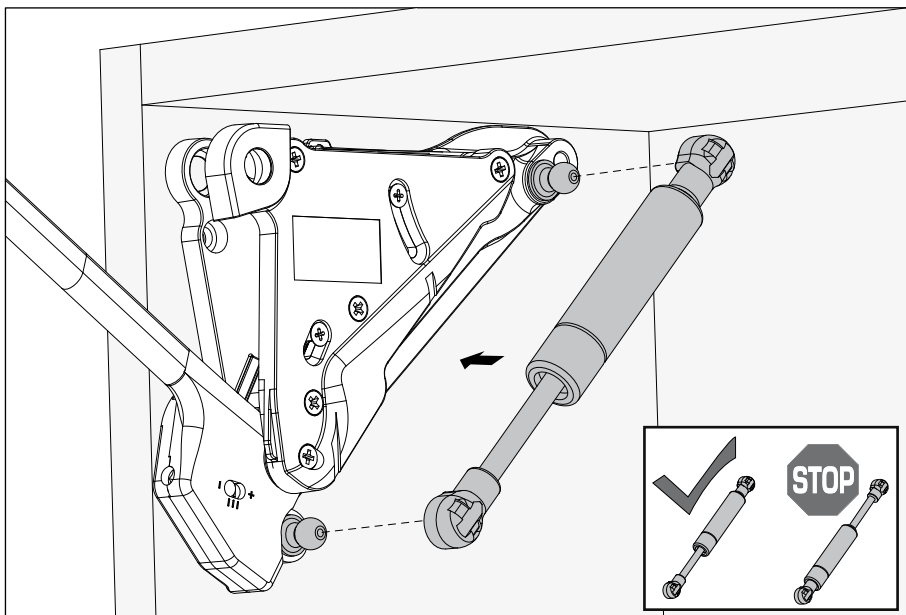


Montaggio anta - Assembling door - Montage der Klappe
Montage de la porte - Montaje de la puerta

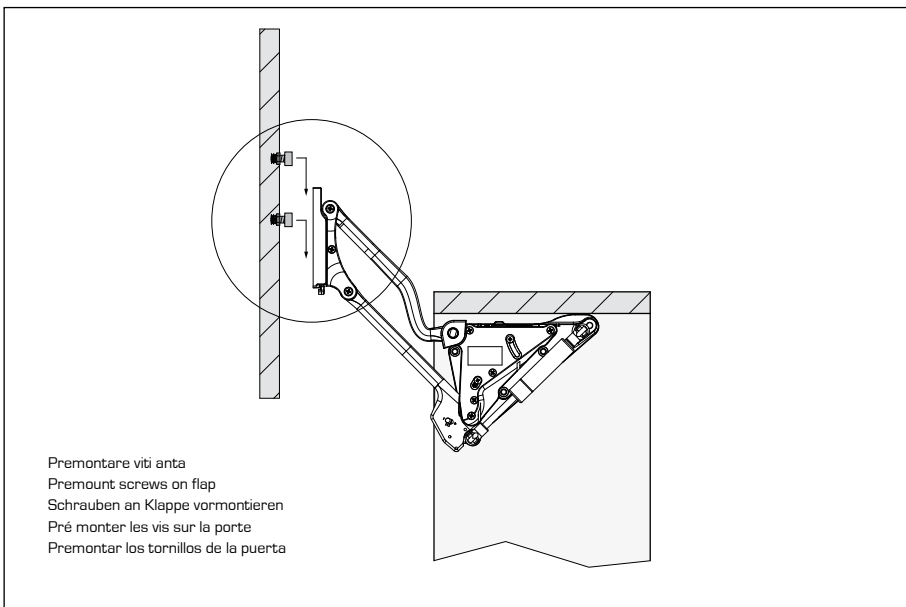


Agganciare l'anta - Hang in flap - Klappe einhängen
Monter la porte - Colocar la puerta

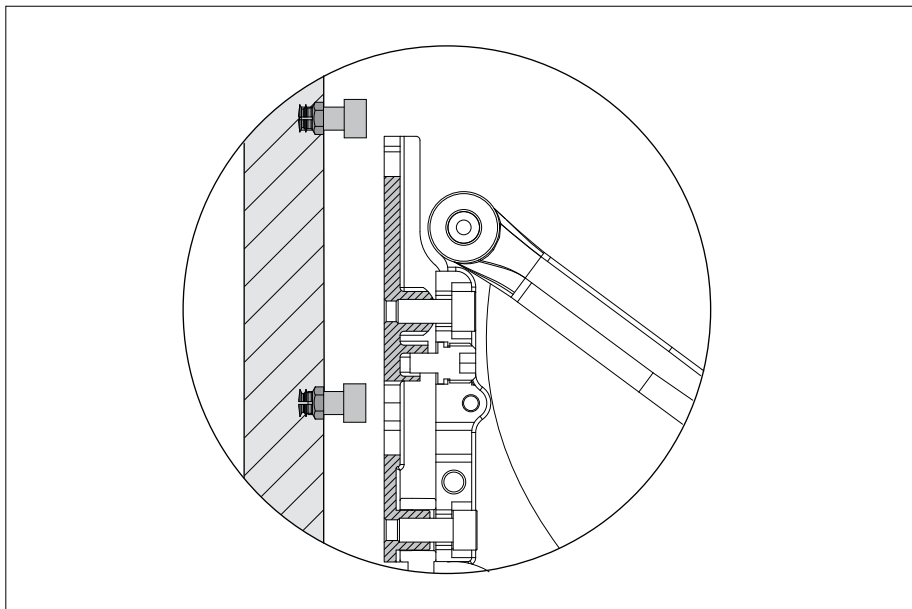


Fissare l'anta - Fix the flap - Klappe anschrauben
Fixer le porte - Fijar la puerta

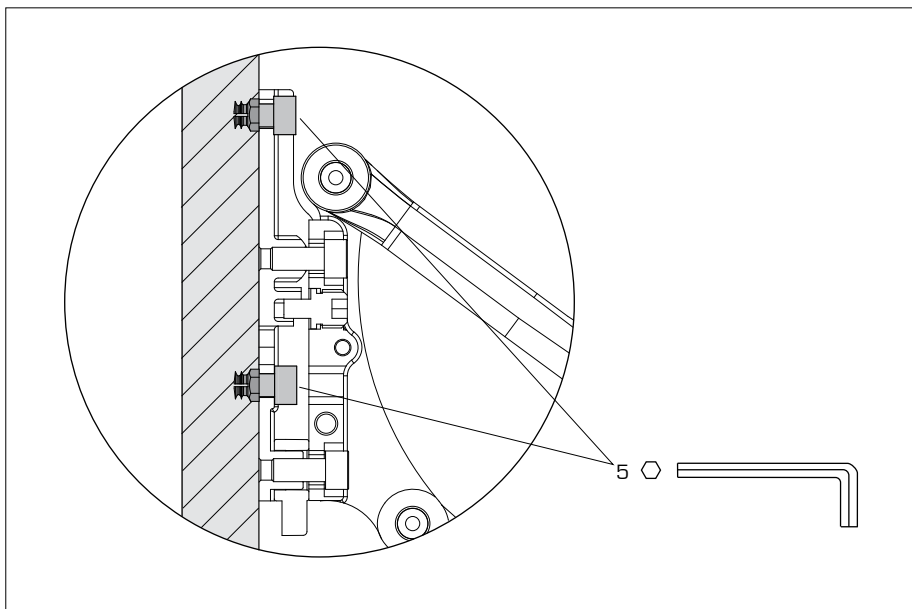


Inserire la barra nei compensatori - Insert bar onto adapters - Stange in Adapter einführen
Enfiler la barre sur les compensateurs - Enfiler la barra en el compensador

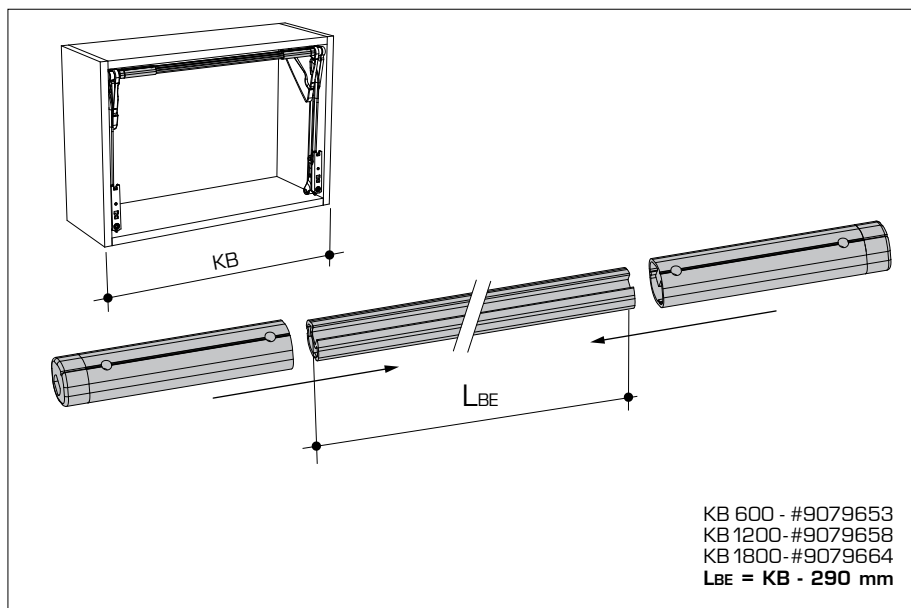

Applicare la barra di collegamento - Install stabilization bar - Quertraverse anbringen
Monter la barre de liaison - Colocar la barra de union

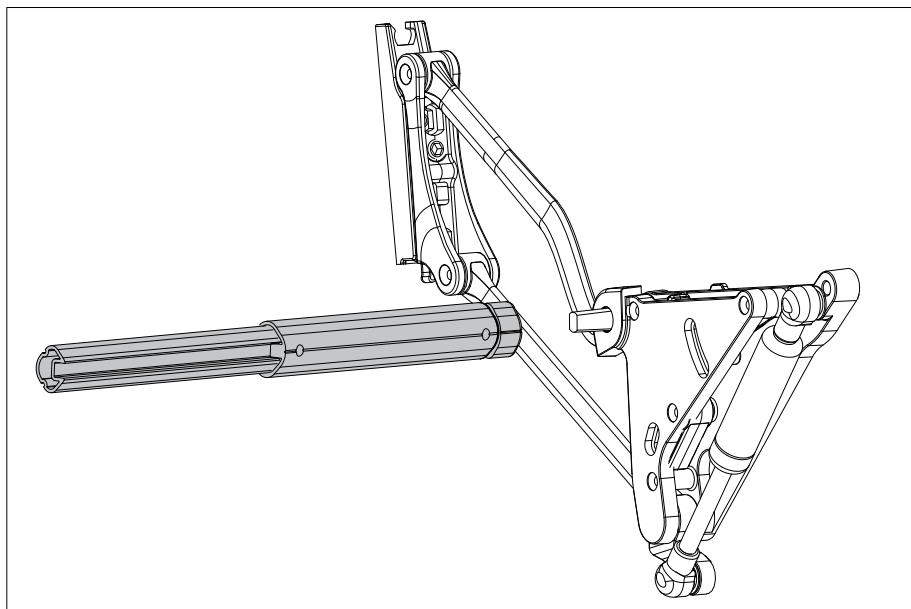

Bloccare i compensatori alla barra - Fix adapters on stabilization bar - Adapter mit Stange verschrauben
Bloquer les compensateurs sur la barre - Bloquear el compensador de la barra

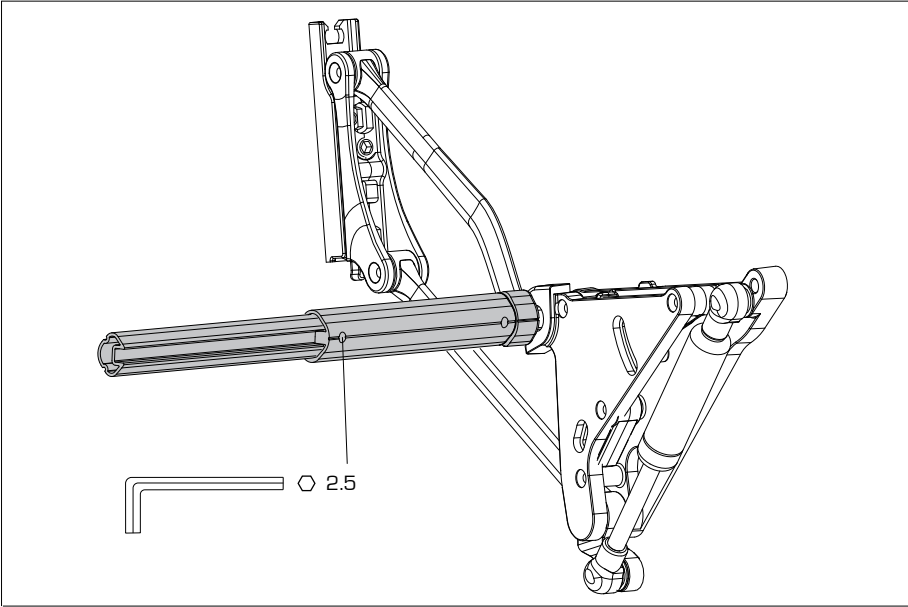

REGOLAZIONI ANTA
DOOR ADJUSTMENTS
EINSTELLUNG DER KLASPE
REGLAGES DE LA PORTE
AJUSTES DE LA PUERTA


Regolazione verticale
Vertical adjustment
Einstellung vertikal
Réglage vertical
Ajuste vertical





Regolazione laterale
Lateral adjustment
Einstellung seitlich
Réglage latéral
Ajuste lateral





Regolazione frontale
Front adjustment
Einstellung Neigung
Réglage frontal
Ajuste frontal

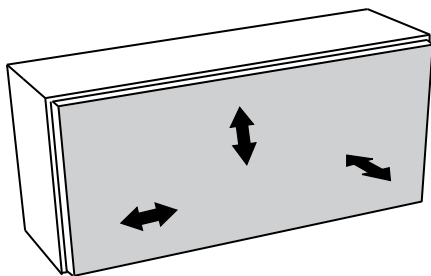



1. Allentare le viti
 1. Loosen fixing screws
 1. Befestigungsschrauben lösen
 1. Relâcher les vis
 1. Aflojar los tornillos
2. Ruotare la camma per muovere l'anta
 2. Rotate cam for moving of flap
 2. Drehen, um Klappe zu bewegen
 2. Tourner la came pour déplacer la porte
 2. Girar el excéntrico para mover la puerta
3. Serrare le viti
 3. Tighten fixing screws
 3. Befestigungsschrauben anziehen
 3. Serrer les vis
 3. Cerrar los tornillos

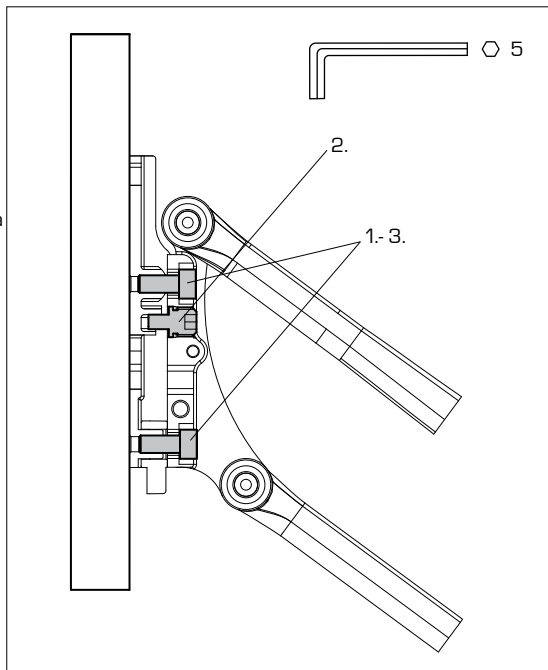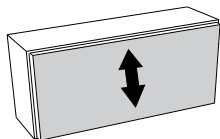

1. Allentare le viti
 1. Loosen fixing screws
 1. Befestigungsschrauben lösen
 1. Relâcher les vis
 1. Aflojar los tornillos
2. Muovere l'anta
 2. Move door
 2. Klappe bewegen
 2. Actionner la porte
 2. Mover la puerta
3. Serrare le viti
 3. Tighten fixing screws
 3. Befestigungsschrauben anziehen
 3. Serrer les vis
 3. Cerrar los tornillos

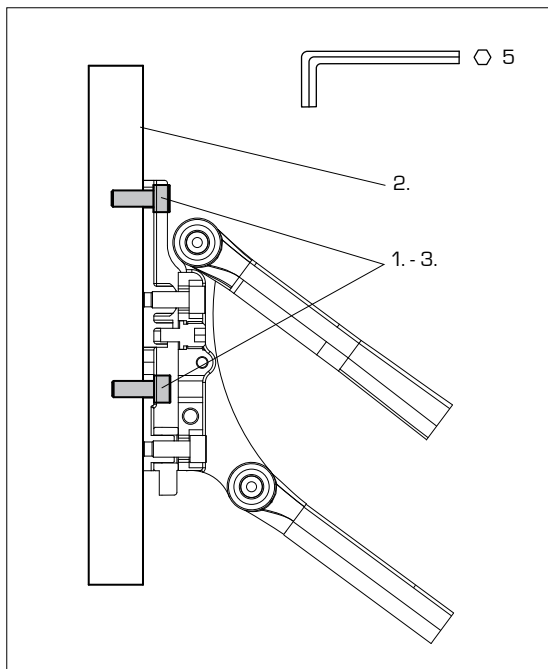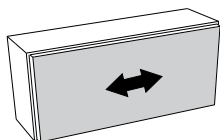

1. Allentare le viti
 1. Loosen fixing screws
 1. Befestigungsschrauben lösen
 1. Relâcher les vis
 1. Aflojar los tornillos
2. Ruotare la levetta per inclinare l'anta
 2. Rotate lever for inclination of flap
 2. Hebel drehen, um Klappe zu neigen
 2. Tourner la languette pour incliner la porte
 2. Girar la palanquita para inclinar la puerta
3. Serrare le viti
 3. Tighten fixing screws
 3. Befestigungsschrauben anziehen
 3. Serrer les vis
 3. Cerrar los tornillos

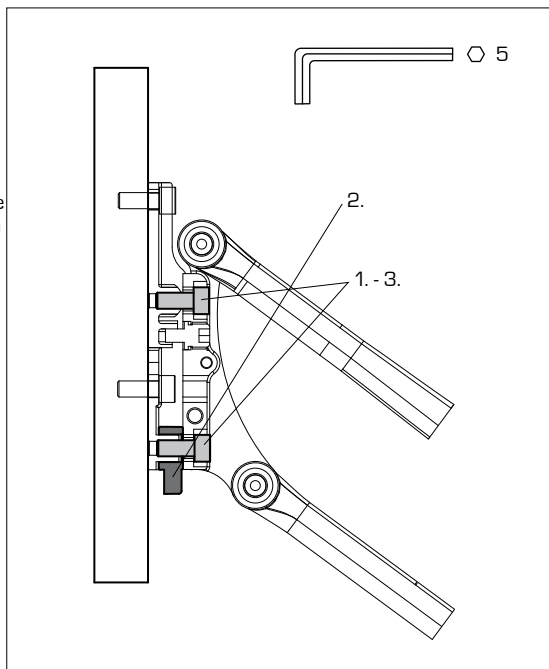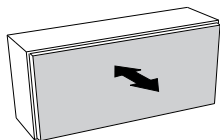


REGOLAZIONE MECCANISMO


MECHANISM ADJUSTMENT

EINSTELLUNG DES BESCHLAGS


RÉGLAGE DU MECANISME

ADJUSTE DEL MECANISMO

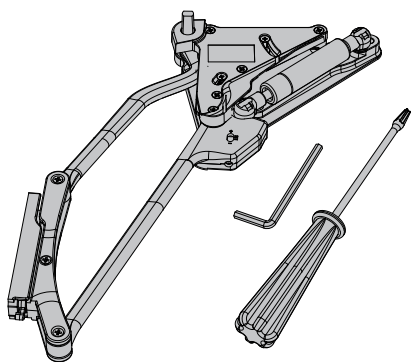


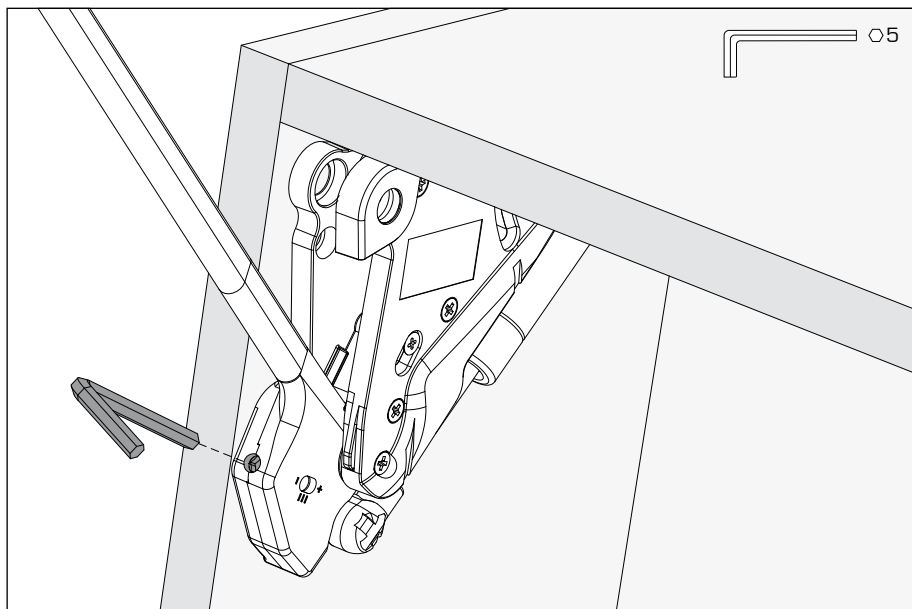


Utilizzare la chiave a brugola per agire sulla regolazione - Use the Allen screw key to achieve the adjustment -
Einstellung der Federkraft durch Inbus-Schlüssel
Utiliser la clé pour faire le réglage - Utilizar la llave Allen para efectuar el ajuste

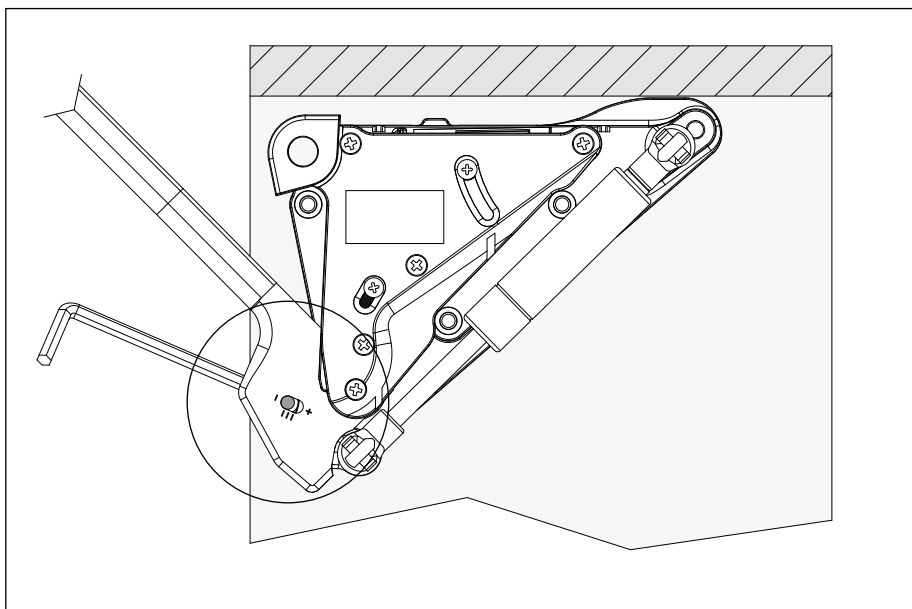


Regolazione forza molla al massimo - Gas spring max adjustment - maximale Federkraft
Réglage max du piston - Adjuste max del piston

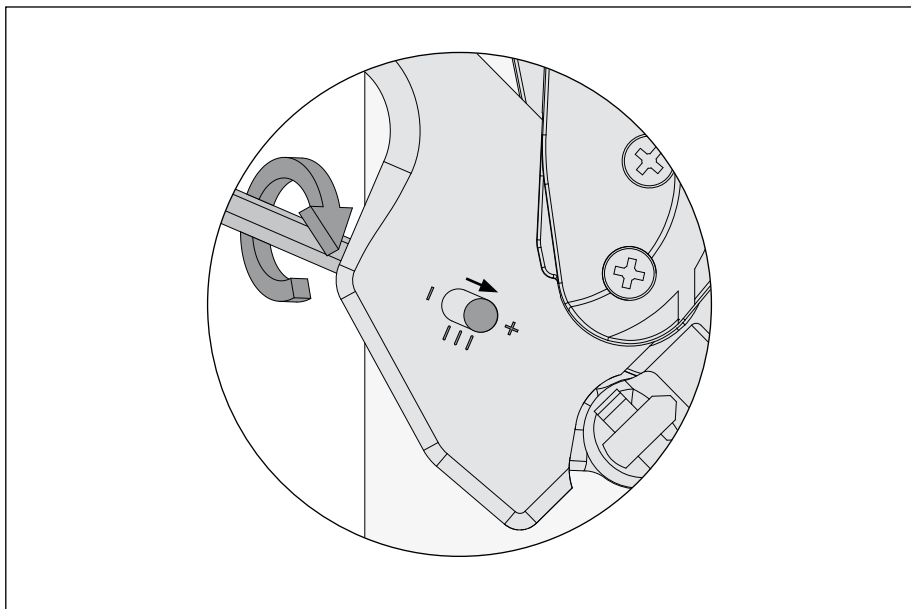


Regolazione forza al minimo - Gas spring min adjustment - minimale Federkraft
Réglage min du piston - Adjuste min del piston

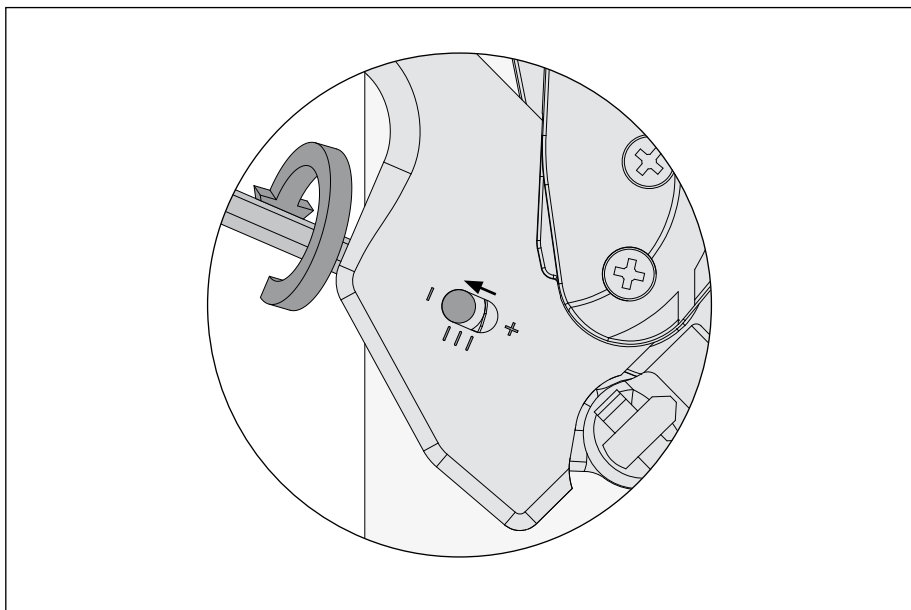


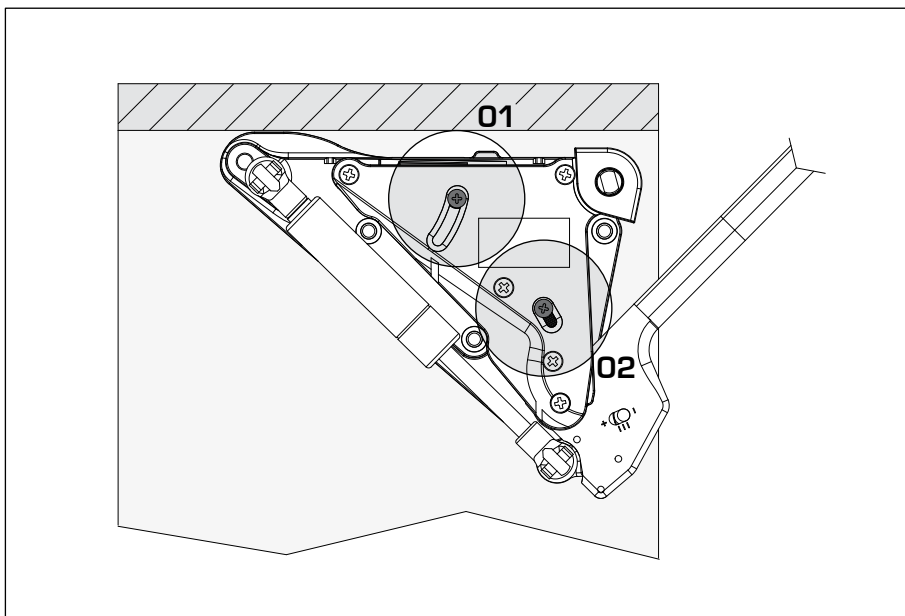


Regolazione ammortizzatore - Damper adjustment - Einstellung Schließdämpfer
 Réglage de l'amortisseur - Ajuste del amortiguador

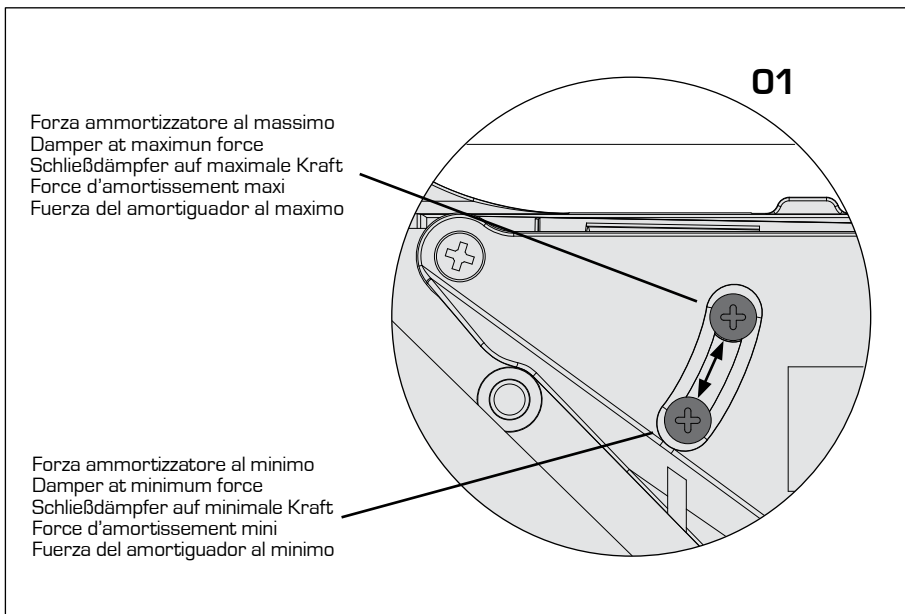

Fermo in apertura - Limitation of opening - Begrenzung der Öffnung
Arrêt en ouverture - Fermo de apertura

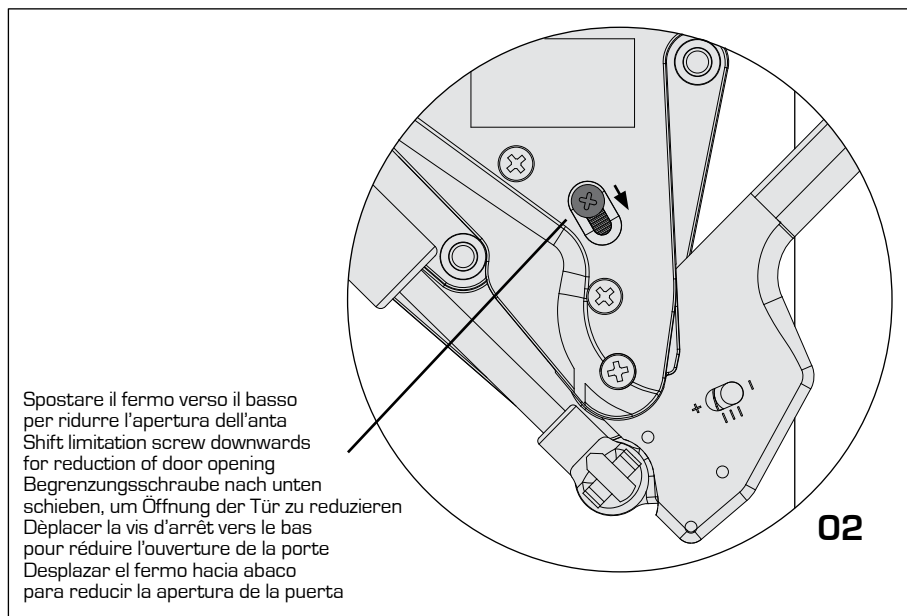

Applicare la copertura - Place the cover - Abdeckkappe anbringen
Poser le couvercle - Colocar la tapa

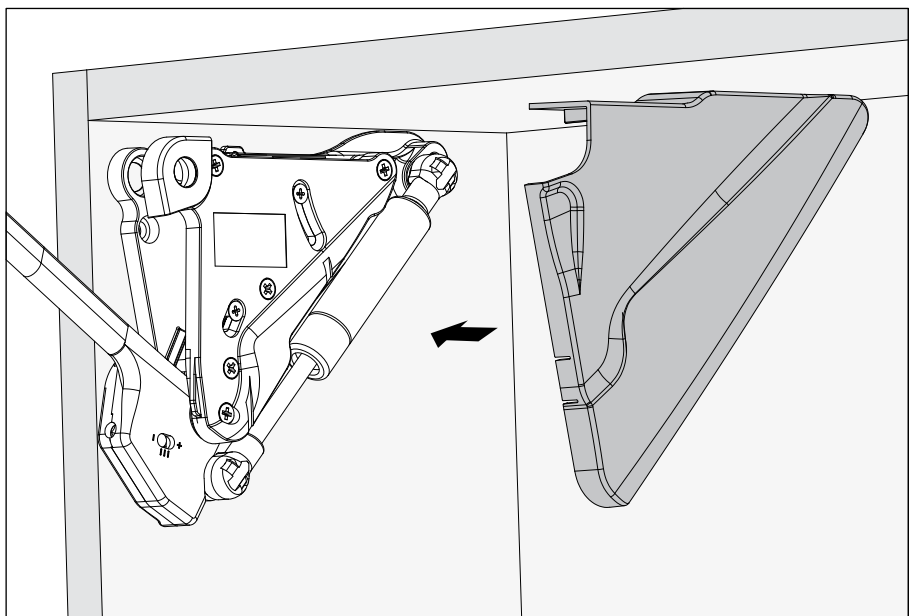

Smontaggio molla a gas – Dismantling of gas spring – Demontage der Gasfeder
Démontage du piston à gaz – Desmontaje del amortiguador de gas

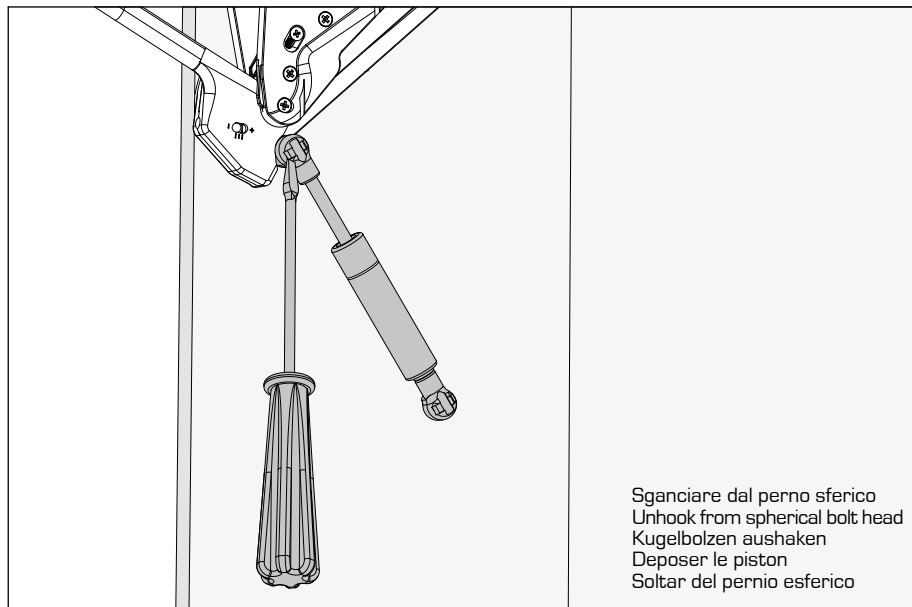
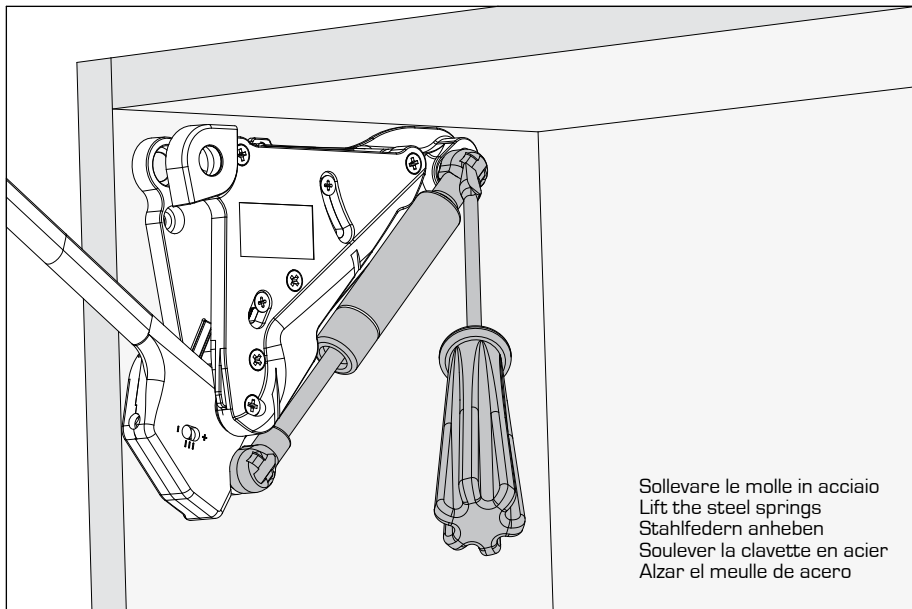


TABELLE FORZE MOLLE LIFT ADVANCED HS

PISTON STRENGTHS CHART LIFT ADVANCED HS

GEWICHTSTABELLEN LIFT ADVANCED HS

BAREME FORCE LIFT ADVANCED HS

TABLA FUERZAS LIFT ADVANCED HS




Attenzione : il peso e la posizione della maniglia possono influenzare le prestazioni del meccanismo

Attention : the weight and the position of the handle may influence the performance of the mechanism

Achtung : Das Gewicht und die Position des Griffes können die Leistung des Beschlags beeinflussen

Attention : le poids et la position de la poignée sont des facteurs influençant les prestations du mécanisme

Atencion : el peso y el posición del tirador pueden influir en las prestaciones del mecanismo

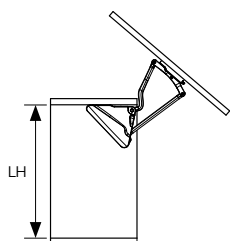


LH = 372 - 408 mm



200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644

Kg	
min	max
3.0	4.4
4.0	5.4
5.3	6.7
6.3	7.9
7.7	9.1
8.8	10.3
10.0	11.5
11.0	12.6
12.1	13.8
13.3	14.9

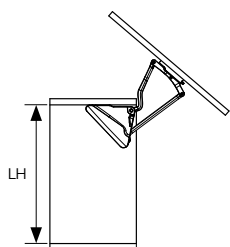


LH = 409 - 508 mm



200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644
700 N	9079645

Kg	
min	max
3.2	4.3
4.2	5.4
5.2	6.5
6.3	7.4
7.3	8.6
8.4	9.9
9.4	10.9
10.5	12.1
11.6	13.2
12.6	14.2
13.6	15.3

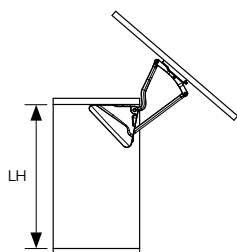


LH = 509 - 568 mm



200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644
700 N	9079645

Kg	
min	max
2.5	3.9
3.4	5.2
4.4	6.4
5.4	7.4
6.5	8.4
7.5	9.5
8.6	10.5
9.6	11.6
10.7	12.6
11.7	13.7
12.8	14.7

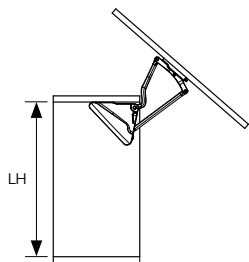

LH = 569 - 688 mm



250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644
700 N	9079645

		Kg	
		min	max
250 N	9079622	3,2	4,8
300 N	9079624	4,0	6,1
350 N	9079626	4,9	7,1
400 N	9079628	5,8	8,2
450 N	9079630	6,8	9,1
500 N	9079632	7,7	10,0
550 N	9079635	8,6	11,6
600 N	9079637	9,6	12,6
650 N	9079644	10,5	13,5
700 N	9079645	11,4	14,3

TABELLE FORZE MOLLE LIFT ADVANCED HL

PISTON STRENGTHS CHART LIFT ADVANCED HL

GEWICHTSTABELLEN LIFT ADVANCED HL

BAREME FORCE LIFT ADVANCED HL

TABLA FUERZAS LIFT ADVANCED HL




Attenzione : il peso e la posizione della maniglia possono influenzare le prestazioni del meccanismo

Attention : the weight and the position of the handle may influence the performance of the mechanism

Achtung : Das Gewicht und die Position des Griffes können die Leistung des Beschlags beeinflussen

Attention : le poids et la position de la poignée sont des facteurs influençant les prestations du mécanisme

Atencion : el peso y el posición del tirador pueden influir en las prestaciones del mecanismo

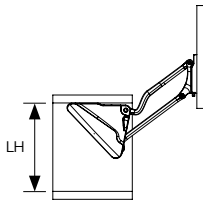


LH = 277 - 312 mm
#9079595



150 N	9079618
200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628

Kg	
min	max
2.1	3.8
3.8	5.4
5.6	7.1
7.3	8.8
8.9	10.5
10.6	12.1

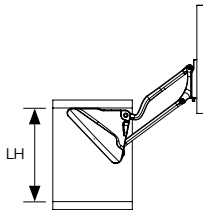


LH = 313 - 342 mm
#9079597



150 N	9079618
200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637

Kg	
min	max
2.3	3.8
3.6	5.3
5.2	7.1
6.5	8.7
7.9	10.2
9.1	11.7
10.5	13.2
11.6	14.7
12.8	16.2
14.2	17.6

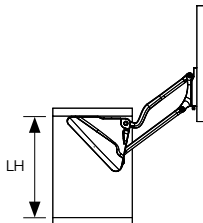


LH = 343 - 372 mm
#9079598



200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644

Kg	
min	max
2.1	4.8
3.3	6.0
4.3	7.2
5.5	8.6
6.6	9.7
7.8	10.9
8.9	12.2
10.0	13.4
11.2	14.6
12.5	15.9

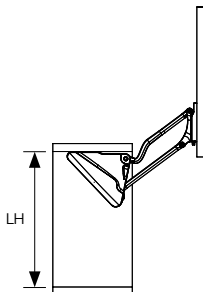


LH = 373 - 402 mm
#9079599



200 N	9079619
250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644

Kg	
min	max
1.7	3.8
2.6	5.0
3.8	6.3
4.9	7.5
6.0	8.7
7.1	9.9
8.2	11.1
9.3	12.4
10.5	13.6
11.7	14.9

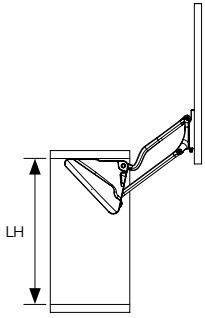

LH = 403 - 462 mm
#9079600



250 N	9079622
300 N	9079624
350 N	9079626
400 N	9079628
450 N	9079630
500 N	9079632
550 N	9079635
600 N	9079637
650 N	9079644

Kg	
min	max
3.2	4.9
4.4	5.9
5.4	6.8
6.3	7.8
7.3	8.7
8.2	9.6
9.1	10.4
10.1	11.4
11.1	12.4

Lift Advanced HS
Lift Advanced HL

SISTEMI DI APERTURE
OPENING SYSTEMS
ÖFFNUNGSSYSTEME
SYSTEMES D'OUVERTURE
SISTEMAS DE APERTURA